 



INSTRUCTIONS FOR SETUP

To contact NEMO Customer Service
Email: journey@nemoequipment.com
Phone: 800-997-9301




1 Stake Corners (optional)

 Secure the corner anchors by pounding stakes into the ground with a rock or hard object. If the ground is too hard, tie the anchors to a rock or another heavy object.



2 Attach Jake's Feet and Grommet

 Press the ball ends of poles into the fittings (Jake's Feet) at the corners of the rear of the inner tent. Insert a locking pole tip into grommet at foot end of inner tent.




3 Clips and Ball Caps

Attach the inner tent to the main poles with clear clips. Snap ends of cross pole in ball caps on sides of tent.



4 Attach Fly

 Clip the corners of your tent fly to the last bar on the Jake's Feet. Pull firmly on the adjustable corner anchors and LineLocs. Proper tension ensures maximum water shedding and wind resistance.



5 Stake Vestibule(s) and Tension Fly

Stake the vestibule anchors and pull firmly on the LineLoc to ensure proper tension in the fly. For maximum interior volume, attach volumizing loop hooks to the webbing loops on inner tent and fly.



©2016 NEMO Equipment, Inc.



Remember to leave no trace. Before leaving your campsite, take a thorough look around making sure you have not left anything behind, out of place, or damaged.

DAGGER™ SERIES