


Hauling shafts for Trail and Expedition pulks - components and fitting instructions

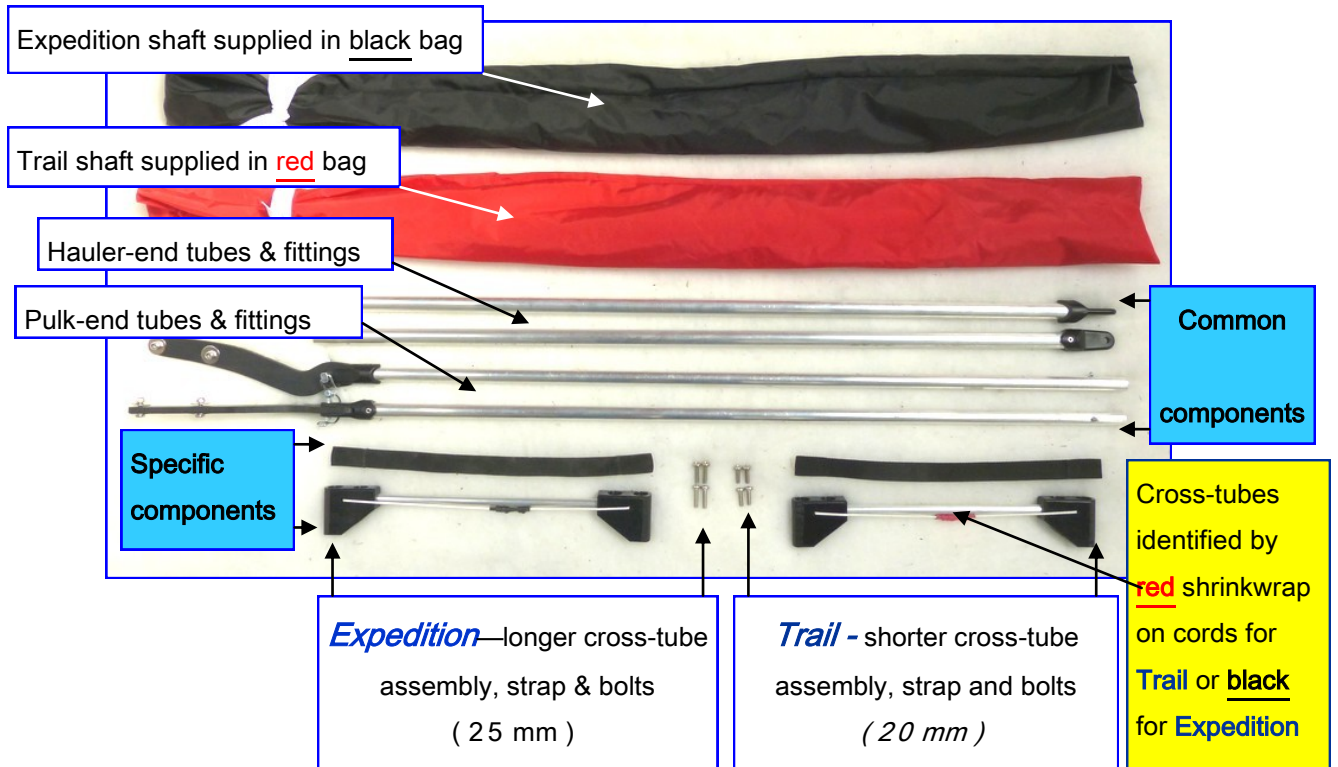


Fitting instructions


1. Slide the loops of the black retaining strap over the button clips, and eventually down to the front of the pulk



2. Attach the 2 shaft plates, With bolt heads and washers on the inside, nuts and washers on the outside.

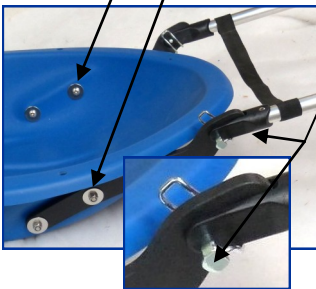


Please note:- pivot pins are fitted from the outside in. (These allow the hauling shaft to be conveniently removed from the pulk, leaving the shaft plates attached)

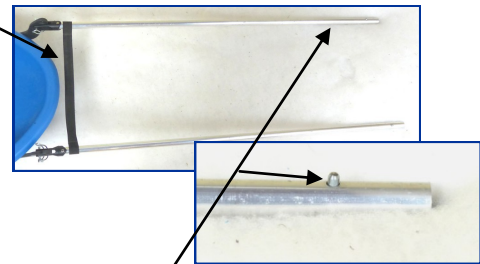


3. The button clips will point upwards when the tubes are fitted the correct way up.

4. Slide the cross-tube and T-brackets down both pulk-end tubes, and over the button clips, to the stop.

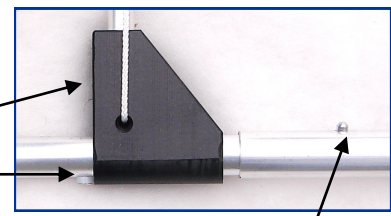

5. Slide the hauler-end tubes over the pulk-end tubes until the button clips engage. These hauler-end tubes can be fitted either side.

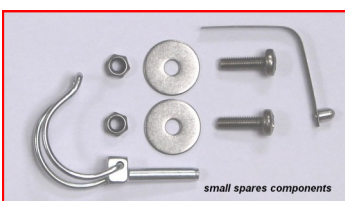

Small items spares kit available