

 
INSTRUCTIONS FOR SETUP

To contact NEMO Customer Service
Email: journey@nemoequipment.com
Phone: 800-997-9301





1 Insert Poles in Corner Grommets

Lay the inner tent on the ground and arrange so ridge (short) poles point toward the doors. Insert locking pole tips into corner grommets. Use the inner grommet unless there is too much tension.

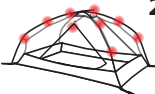



2 Attach Inner Tent to Poles

 Attach the inner tent canopy to the poles using pole clips. Use finger loops to help insert ridge pole tips into grommets.

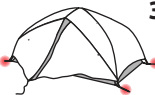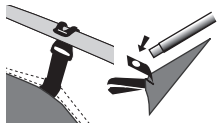

3 Attach Rain Fly

Cover the inner tent with the rain fly. Locate the webbing straps on the corners of the fly and secure their grommets under the main pole end tips. Adjust tension in the fly using the webbing straps and ladder lock buckles.

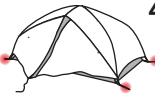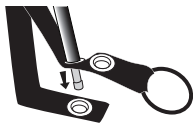


4 Stake in Place

Position your tent as desired and stake the four corner anchors. As you pull at the corners, watch the tension in the floor of the tent to keep it even. If the ground is too hard for stakes, tie anchors to rocks or other heavy objects.



5 Vestibules and Tension

Stake both vestibules and pull firmly on all adjustable corner anchors. Add guy-lines for additional strength. A properly tensioned tent ensures maximum water shedding and wind resistance.

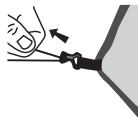

©2017 NEMO Equipment, Inc.



Remember to leave no trace. Before leaving your campsite, take a thorough look around making sure you have not left anything behind, out of place, or damaged.

GALAXI™ SERIES