

munkees



FixnZip®

multi award winning
ZIPPER REPAIR KIT
ZIPPER REPAIR ANYWHERE,
WITHOUT TOOLS OR SEWING!

GETTING STARTED - ZIPPER SIZE

Start by checking the back of your broken zipper.
Most zippers have a size number (0 - 10) embossed
on the back of the slider.

FixnZip® works on plastic, nylon & metal zippers and is
available in three different sizes - just choose the right
one for your zipper.

Small = Coil & Teet: 1 - 4

Medium = Coil & Teet: 5 - 7

Large = Coil & Teet: 8 - 10


If you can't find a number on your zipper,
measure the width of its teeth or coils:

Tooth or Coil Zippers (mm):

1 - 4,5 mm = Small

5 - 7,5 mm = Medium


8 - 10 mm = Large

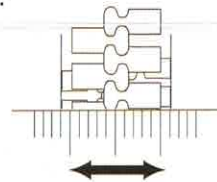

STEPS TO FIX OPEN END ZIPPERS (e.g. Jackets)


STEP 1

The screw on the FixnZip® slider should
be towards the outside of the item.

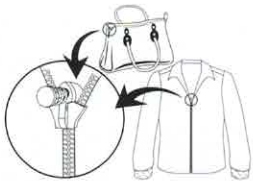


STEP 2

Loosen the screw on slider.

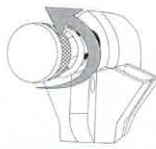



STEP 3

Slip the slider over the row
of zipper teeth which has
the box at its end.

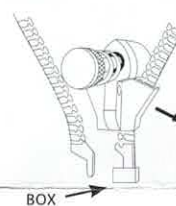


STEP 4

Place slider close to zipper box.
Tighten the screw all the way down,
then loosen 1/4 turn.

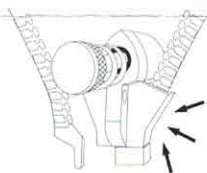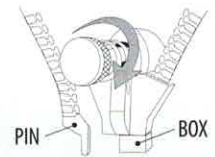

STEP 5

Slider should now be tightly secured
to one row of teeth, like you would
find on an unzipped jacket.

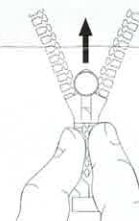

STEP 6


Insert zipper pin into the
slider and zip up the jacket.

STEPS TO FIX CLOSE END ZIPPERS (e.g. Tents and Bags)

STEP 1 - 2 AS DESCRIBED ABOVE


STEP 3

Feed both rows of teeth into the slider.
Position as close to the retaining box
as possible.

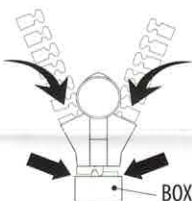


STEP 4

Tighten thumbscrew down
all the way.

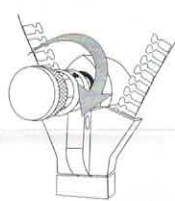


STEP 5

Squeeze the top and bottom of
slider at the same time.
With your other hand, firmly
grasp the zipper box.

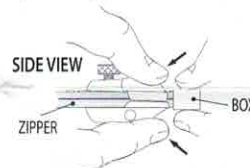


STEP 6

While still squeezing the
slider, pull it up the zipper
a few centimetres.
Retighten thumbscrew
if needed and continue
closing the zipper.

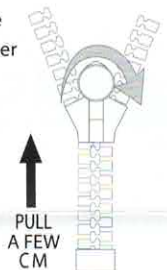

STEPS FOR INVISIBLE | WATERTIGHT ZIPPERS

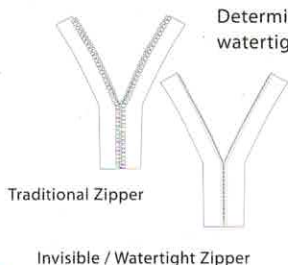


Determine if you have an invisible /
watertight zipper.

When applying the FixnZip® slider
to invisible / watertight zippers, the
thumbscrew should face the inside
of the item.



Use the additional slot on
the underside of the slider
to attach the cord pull.

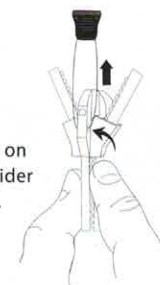

For tutorials and additional
information visit our
AceCamp® YouTube-channel:



munkees.com/zipyou