



----- Cut here to remove. Do Not Tear! -----

SLATER UL SET UP INSTRUCTIONS

1. Remove contents from stuff sack. Spread tent body out on ground.
2. Assemble the pole. To ensure each pole section is fully seated insert each pole section into the next by hand, instead of allowing the shock cord to snap them together.
3. Insert the pole tips into the grommets at the front corners and foot of the tent.
4. Attach the H Clips to the underside of the S Stoppers.
5. Attach all Twist Clips to the pole.
6. Stake out the two cord loops at the head of the tent and the three loops at the foot.
7. Drape the rainfly over the tent so that the door on the fly lines up with the door on the body.
8. On the underside of the fly on each side of the tent are two clips sewn into the hem opposite the guylines. Clip these to the corresponding webbing loop sewn into the tent body. The loop on the tent body is located where the floor of the tent meets the side wall.
9. Make sure the webbing at the corners of the rainfly is completely slackened. Attach the buckles on the rainfly to those on the tent body.
10. Attach the two cord loops at the rear of the fly to the stakes that you used for the tent body.
11. Stake out the vestibule.
12. Evenly tension the webbing on each corner as needed to keep the rainfly taut.
13. Stake out all guylines.

 
**Separate 6", large diameter pole segment included for emergency field repair.
Slide repair pole over the break to act as a splint.**

FAST FLY SET UP INSTRUCTIONS

If you purchase the optional Big Agnes footprint for your Slater tent it will enable you to pitch a shelter while leaving the tent body behind. The Fast Fly configuration requires the footprint, rainfly, poles and stakes.

1. Lay the footprint on the ground and stake out.
2. Assemble the pole.
3. Insert the pole ends into the grommets at the front corners and rear of the footprint.
4. Drape the rainfly over the tent.
5. Make sure the webbing at the corners of the rainfly is completely slackened. Attach the buckles on the rainfly to those on the footprint.
6. Attach the two cord loops at the rear of the fly to the stakes that you used for the footprint.
7. Stake out the vestibule.
8. Evenly tension the webbing on each corner as needed to keep the rainfly taut.
9. Stake out all guylines.

DAC Hardware:




H Clip




S Stopper




Twist Clip

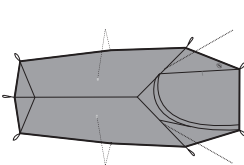


Slater UL1+
Tent with Fly

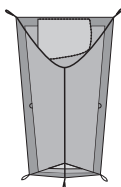

Slater UL1+
Tent Body

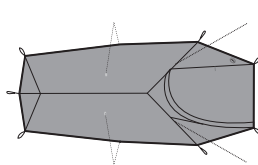

Slater UL2+
Tent with Fly

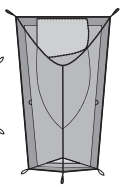

Slater UL2+
Tent Body



----- Cut here to remove. Do Not Tear! -----



P.O. Box 773072 • Steamboat Springs, Colorado • 80477
Toll Free: 877.554.8975 • www.bigagnes.com

For more information on Tent Care or our Warranty and Return policy, see www.bigagnes.com or call 970-367-4400.

must be clean and free of debris.

at the discretion of Big Agnes, at a reasonable charge. Tents returned for repair Damage due to misuse, normal wear and tear, or improper care may be repaired, by owner, misuse, accidents or damages caused by uses other than intended.

All Big Agnes tents are guaranteed against manufacturing or material defect. We do not warranty products damaged from normal wear and tear, alteration made

Repairs and Warranty

lubricants because they attract dirt.

Keeping your zippers clean will help keep the coils and sliders from wearing out. If filled with dirt, vacuum or brush zippers before storing tent. Try to avoid liquid

Zippers

your tent. Damage caused by misapplication may void warranty. extra protection. Make sure the seam-sealer is completely dry before re-packing been taped do not need to be seam sealed with a liquid sealer unless you want

Seam tape alone is durable enough to prevent water leakage. Any seams that have

Seam Sealing

dishwashing liquids.

For light cleaning, you can sponge the tent with warm water. If it's necessary to wash the entire tent, always use cleaners recommended specifically for tents. We recommend McNett Mirazyme cleaner, or Nikwax Tech Wash. Do not dry clean or machine-wash your tent. Detergents and dry cleaning solvents will damage the fabric and ruin waterproofing. Never use hot water, bleach, liquid detergents or

Cleaning

not covered under warranty.

Always make sure your tent is dry and free of debris before storing. Stuff or fold your tent a different way each time to avoid permanent creases. Store in a cool, dry place. Never leave your tent in hot temperatures (such as a car trunk or attic space), as it will damage the material coatings. Storing your tent damp can result in mildew growth, which may cause your tent to smell, leak or delaminate. Mildew damage is

Storage

TENT CARE

- Our tents are easy to set up but we suggest you practice once at home before using them for the first time to avoid late night bickering with tent mates while fumbling around in the dark.
- Before pitching tent, clear campsite of debris that may pierce tent floor.
- Big Agnes tents are all freestanding, but we recommend staking them out to increase space and keep your tent from becoming a tumbleweed.
- Hang onto your stuff sacks or they'll blow away and create backcountry litter.
- Pull on the pole sleeve fabric when inserting poles to avoid any bunching in the material.
- Push rather than pull poles through pole sleeves.


HELPFUL HINTS FOR TENT SET UP

tech@bigagnes.com

Please feel free to contact us if you have any questions or comments.

Thanks for choosing a Big Agnes tent!

Slater UL 1+

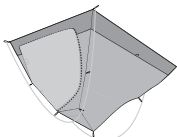

Slater UL 2+

